




 
Assembly Instruction

ITEM NO.: 8449BK/BU/BR/GY-2PWHM


Power Double Reclining Love Seat with Center Console, Power Headrests, Storage Arms with Cup Holders, Wireless charger, Air Massage and Heat, LED Lighting and Charging Ports

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


Component list

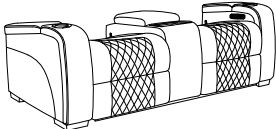No	Drawing	Qty	Description
A		1	SEAT
B		1	LSF BACK REST
C		1	CONSOLE BACK REST
D		1	RSF BACK REST
E		2	ADAPTOR



Step #1

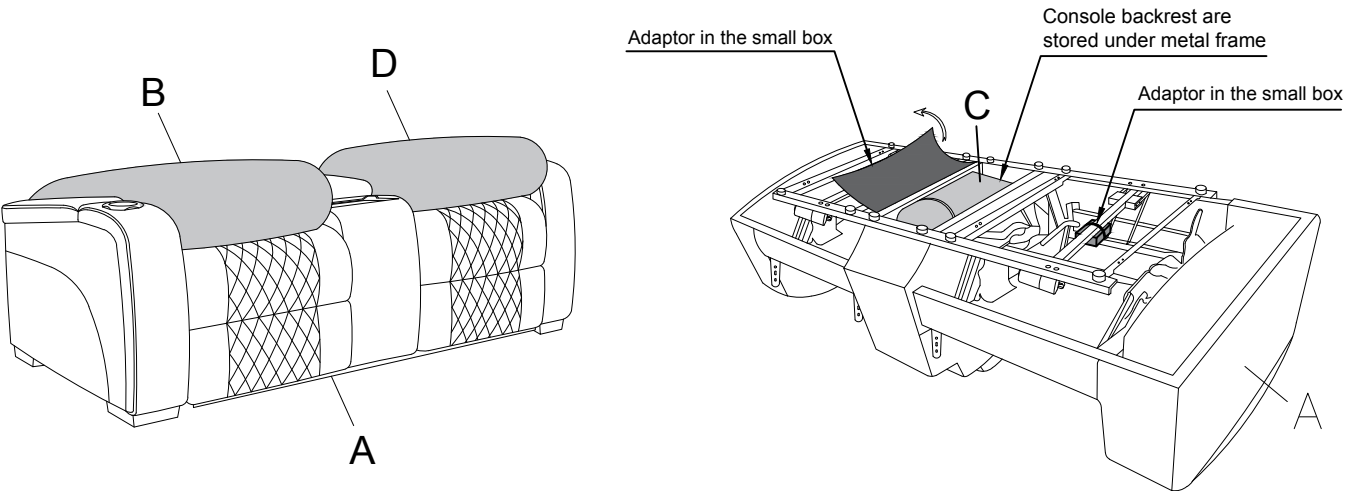

Step #2

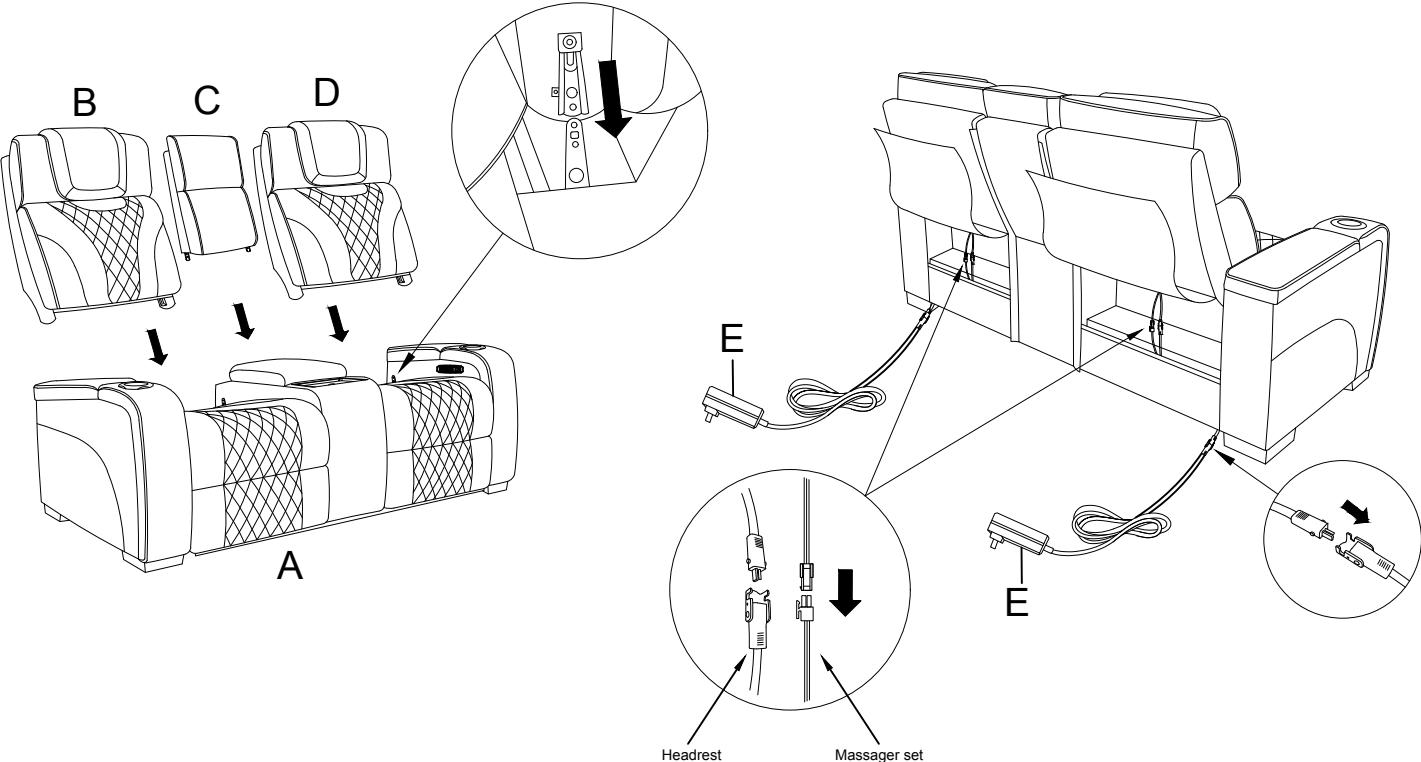

Step #3

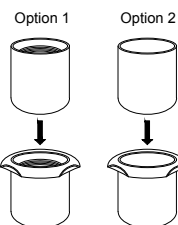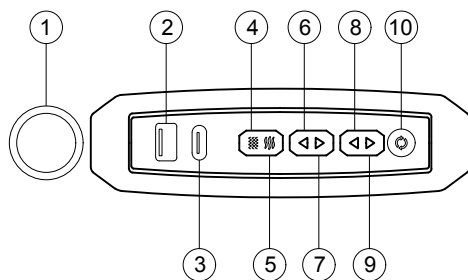

- ① **LED light setting:**
 Mode 1: 50% brightness
 Mode 2 : 75% brightness
 Mode 3 : 100% brightness
 Mode 4 : OFF

- ② **USB PORT**

- ③ **USB Type C**

- ④ **3 modes massager:**
 Mode 1-Press once to activate continuously high speed rolling.
 Mode 2-Press again/twice to activate mid speed rolling with pause.
 Mode 3-Press again/three times to active low speed rolling with pause.
 Press again/4 times to turn off rolling.

- ⑤ **Heating:**
 Press once with one beep to start heating.
 Press again/twice with two beeps to increase the heat.
 Press again/3rd time with one beep to turn off the heating.

- ⑥ **Open recliner**

- ⑦ **Close recliner**

- ⑧ **Open headrest**


- ⑨ **Close headrest**

- ⑩ **Home button / Indicator light button**




Home button: Reset recliner and headrest
 **Massage and heating functions automatically turn off without operation after 30 minutes.

Home button / Indicator light button

- Blue Light – Massage function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Massage and Heating are ON at the same time.
- Light OFF – Both Massage and Heating are OFF.

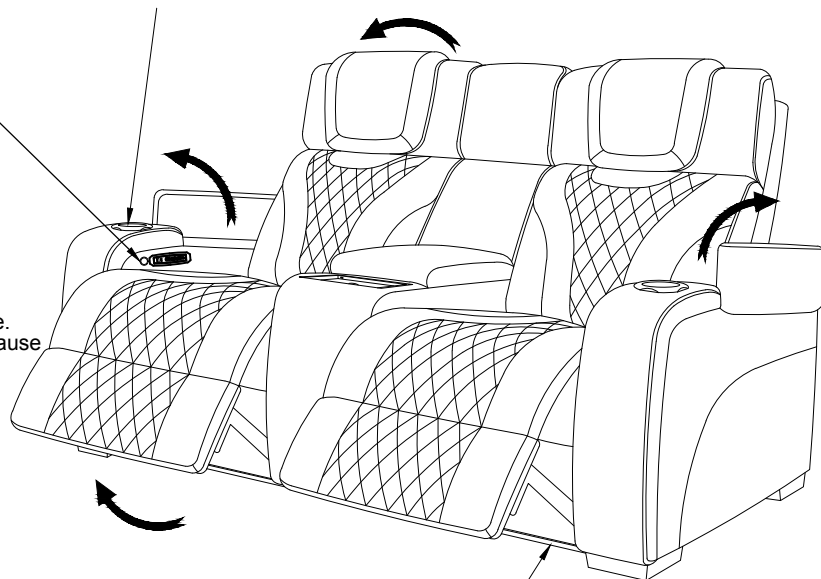

Led Light

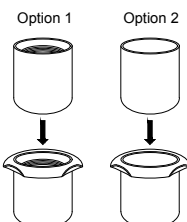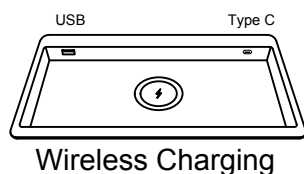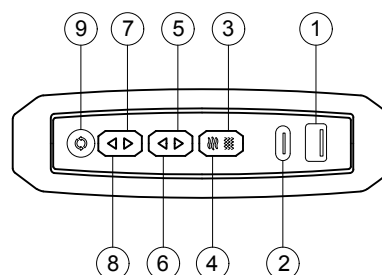

- ① **USB PORT**

- ② **USB Type C**

- ③ **3 modes massager:**
 Mode 1-Press once to activate continuously high speed rolling.
 Mode 2-Press again/twice to activate mid speed rolling with pause.
 Mode 3-Press again/three times to active low speed rolling with pause.
 Press again/4 times to turn off rolling.

- ④ **Heating:**
 Press once with one beep to start heating.
 Press again/twice with two beeps to increase the heat.
 Press again/3rd time with one beep to turn off the heating.

- ⑤ **Open recliner**

- ⑥ **Close recliner**

- ⑦ **Open headrest**


- ⑧ **Close headrest**

- ⑨ **Home button / Indicator light button**

Home button: Reset recliner and headrest
 **Massage and heating functions automatically turn off without operation after 30 minutes.

Home button / Indicator light button

- Blue Light – Massage function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Massage and Heating are ON at the same time.
- Light OFF – Both Massage and Heating are OFF.

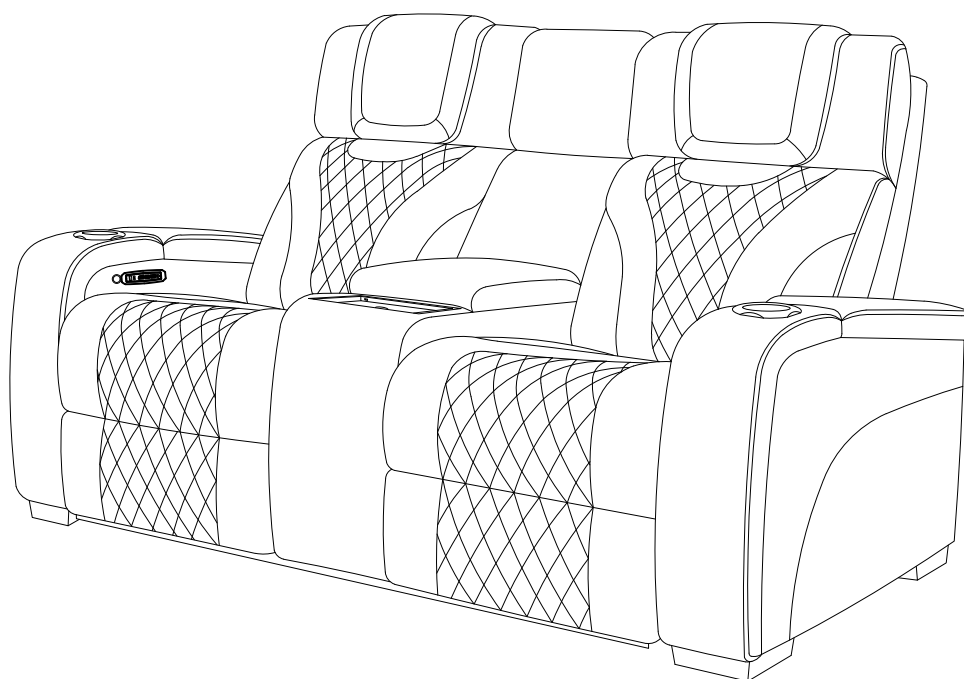

Care Instruction for Genuine Leather match with PVC Furniture:

In order to maintain the original appearance of your Genuine Leather match with PVC, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Genuine Leather match with PVC.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.