




Assembly Instruction

ITEM NO.: 8449BK/BU/BR/GY-3PWHM


Power Double Reclining Sofa with Center
Drop-Down Cup Holders, Power Headrests,
Storage Arms with Cup holders, Reading Lights,
Wireless Charger, Air Massage and Heat, LED
Lighting and Charging Ports

Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.


Component list

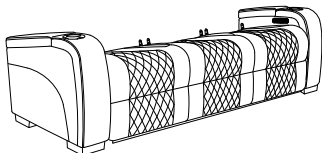No	Drawing	Qty	Description
A		1	SEAT
B		1	LSF BACK REST
C		1	MIDDLE BACK REST
D		1	RSF BACK REST
E		2	ADAPTOR


Step #1

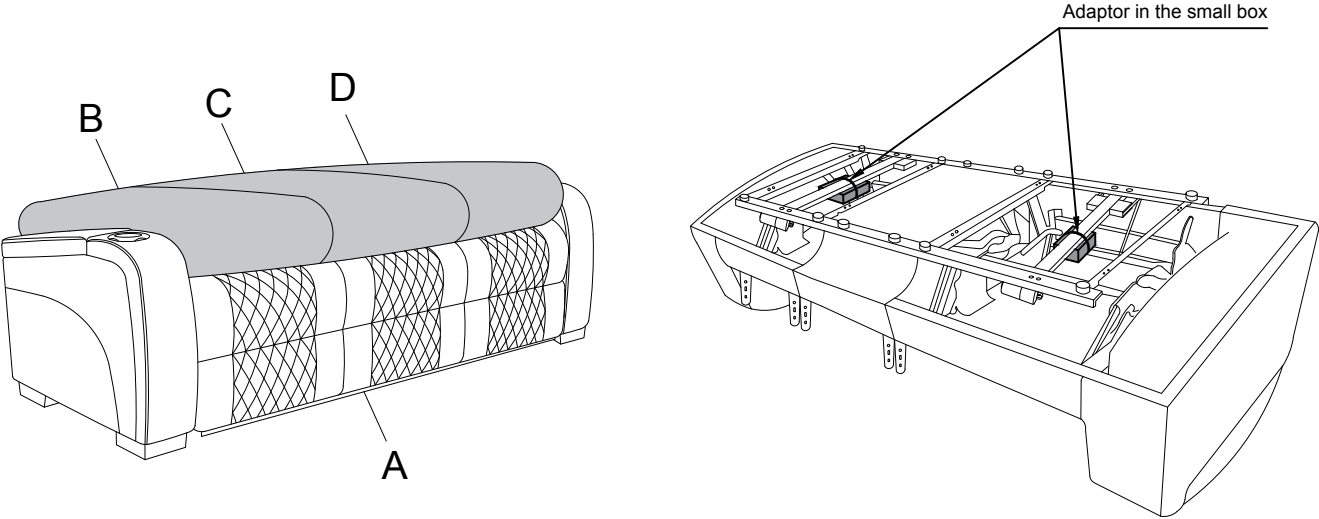

Step #2

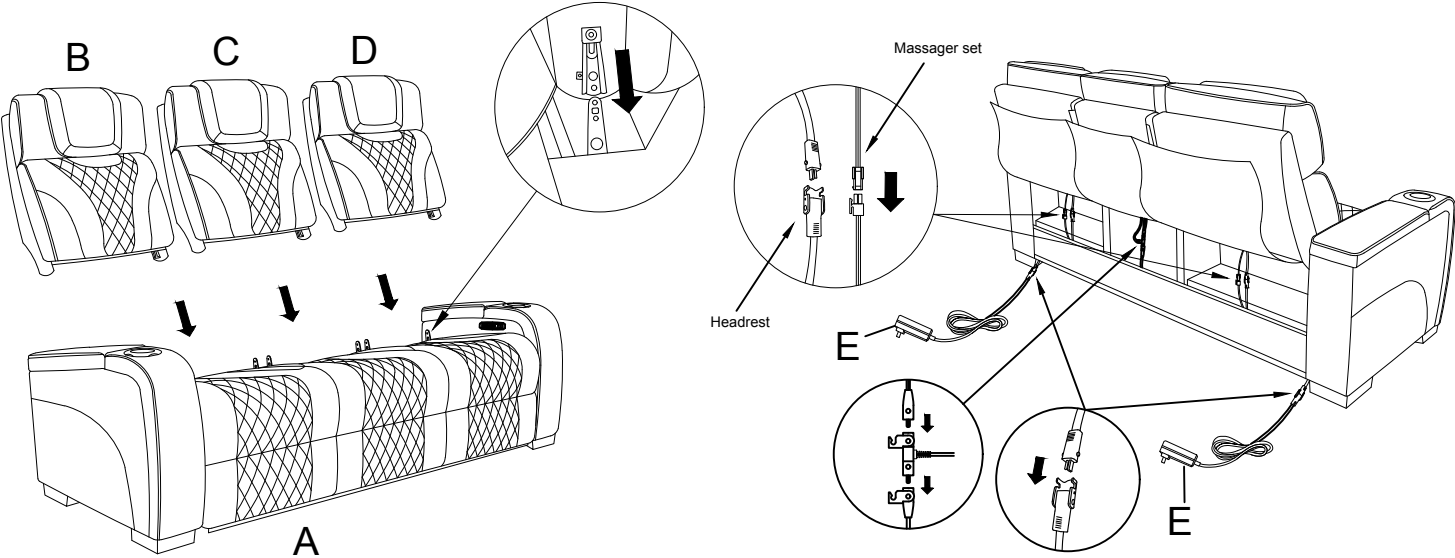

Step #3

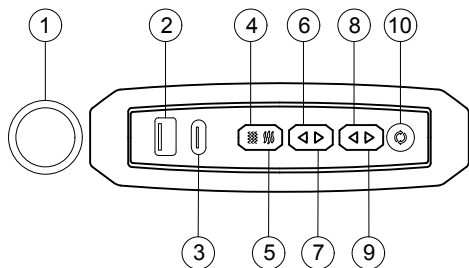


- ① **LED light setting:**
Mode 1: 50% brightness
Mode 2: 75% brightness
Mode 3: 100% brightness
Mode 4: OFF
- ② **USB PORT**
- ③ **USB Type C**
- ④ **3 modes massager:**
Mode 1-Press once to activate continuously high speed rolling.
Mode 2-Press again/twice to activate mid speed rolling with pause.
Mode 3-Press again/three times to active low speed rolling with pause
Press again/4 times to turn off rolling.
- ⑤ **Heating:**
Press once with one beep to start heating.
Press again/twice with two beeps to increase the heat.
Press again/3rd time with one beep to turn off the heating.
- ⑥ **Open recliner**
- ⑦ **Close recliner**
- ⑧ **Open headrest**
- ⑨ **Close headrest**
- ⑩ **Home button / Indicator light button**

Home button: Reset recliner and headrest


****Message and heating functions automatically turn off without operation after 30 minutes.**

Home button / Indicator light button

- Blue Light – Message function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Message and Heating are ON at the same time.
- Light OFF – Both Message and Heating are OFF.

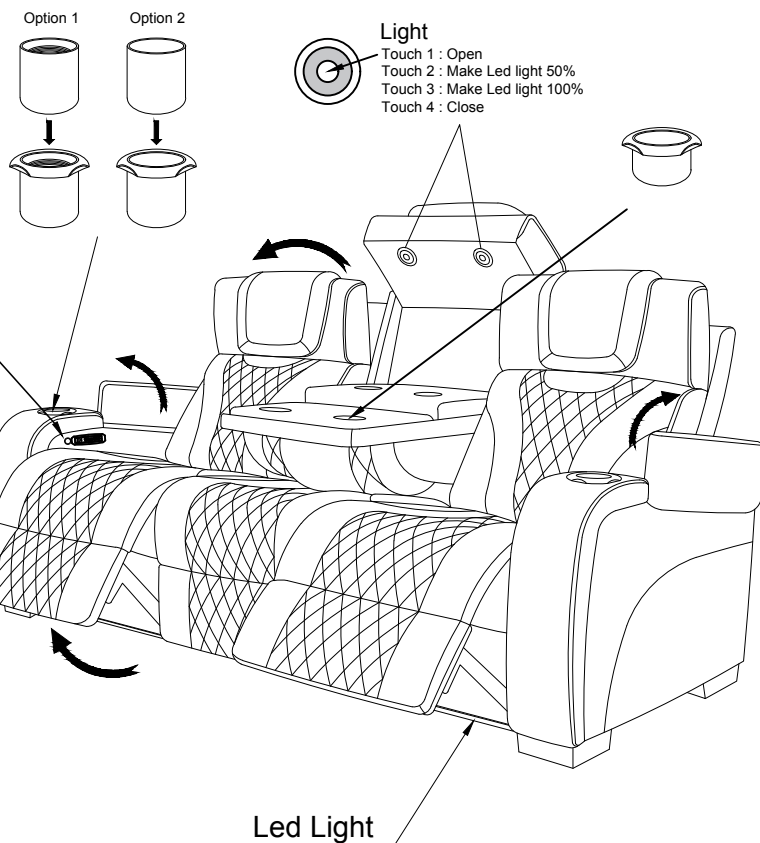

Led Light

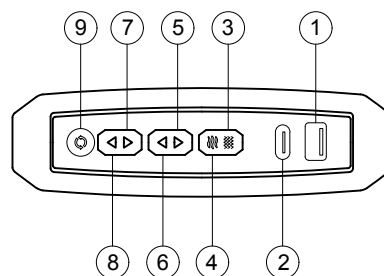


- ① **USB PORT**
- ② **USB Type C**
- ③ **3 modes massager:**
Mode 1-Press once to activate continuously high speed rolling.
Mode 2-Press again/twice to activate mid speed rolling with pause.
Mode 3-Press again/three times to active low speed rolling with pause
Press again/4 times to turn off rolling.
- ④ **Heating:**
Press once with one beep to start heating.
Press again/twice with two beeps to increase the heat.
Press again/3rd time with one beep to turn off the heating.
- ⑤ **Open recliner**
- ⑥ **Close recliner**
- ⑦ **Open headrest**
- ⑧ **Close headrest**
- ⑨ **Home button / Indicator light button**

Home button: Reset recliner and headrest


****Message and heating functions automatically turn off without operation after 30 minutes.**

Home button / Indicator light button

- Blue Light – Message function is ON
- Red Light – Heating function is ON
- Blue + Red Lights – Both Message and Heating are ON at the same time.
- Light OFF – Both Message and Heating are OFF.

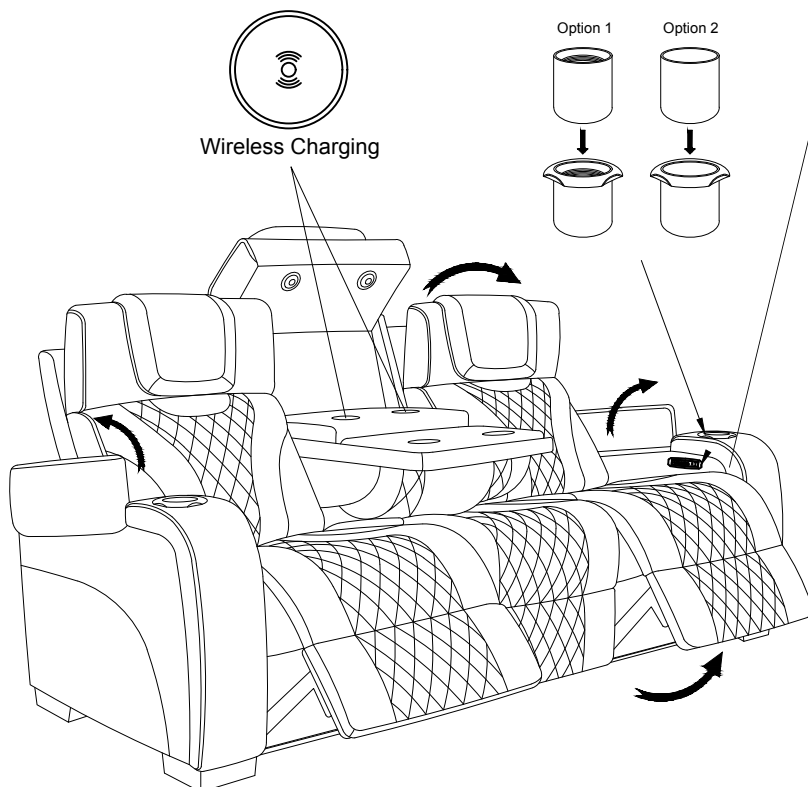

Wireless Charging

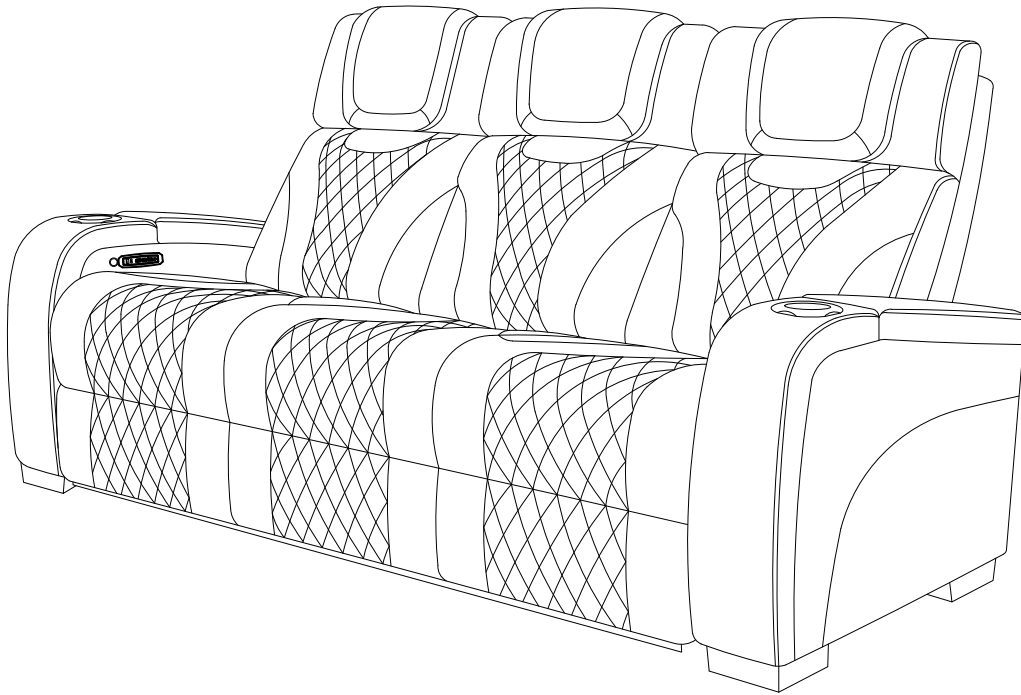

Care Instruction for Genuine Leather match with PVC Furniture:

In order to maintain the original appearance of your Genuine Leather match with PVC, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Sunlight and or exposure to heating and air conditioning outlets will fade/damage Genuine Leather match with PVC.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary.



For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.